

## 91–119 Remove and install vacuum switch of driver's seat back (coupe)

---

### Color coding of the vacuum lines for seat back locking system

---

Control line


light blue

---


### Remove

---


- 1 Remove tension part of the driver's seat back.
- 2 Pull connection piece (17) with control line off vacuum switch (46).
- 3 Remove clamp spring (114).

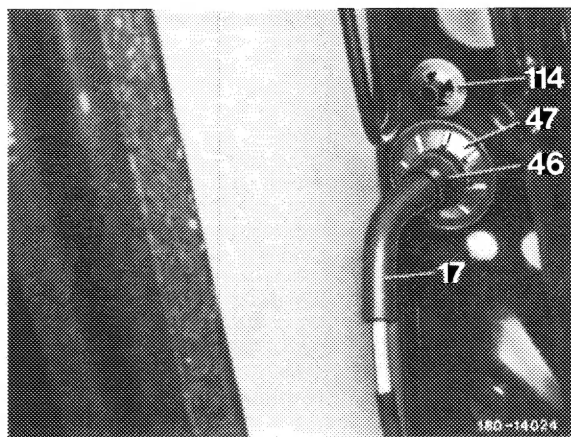

- 4 Remove clover (113) at the driver's seat back.

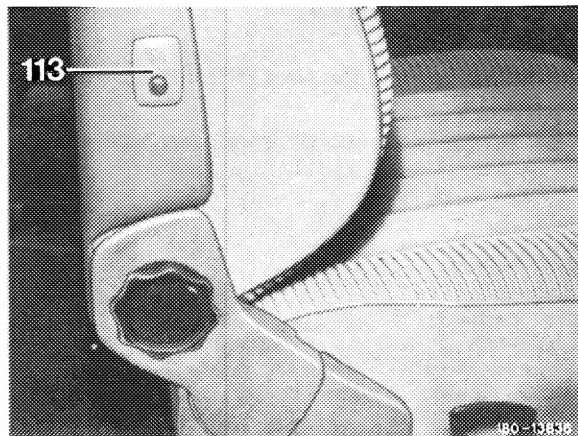

- 5 Cut clamp spring (47) and pull vacuum switch (46) out of driver's seat back.

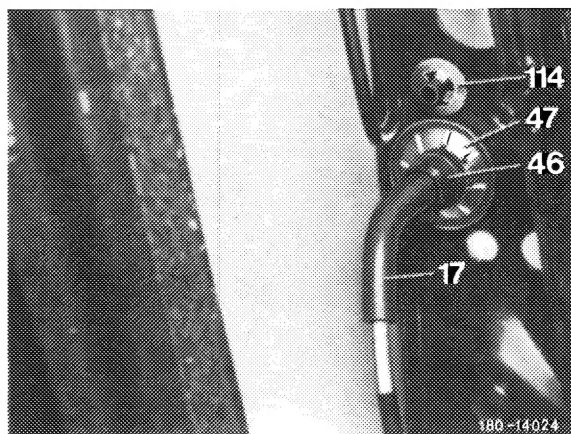


## Install


---

6 Insert vacuum switch (46) into driver's seat back.

7 Fit new clamp spring (47) to vacuum switch (46).

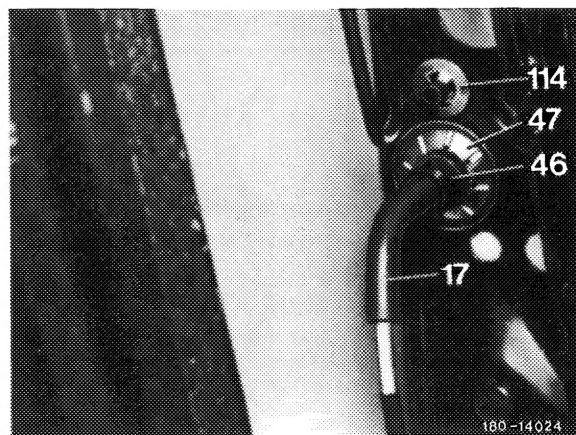

8 Fit cover (113) into driver's seat back.

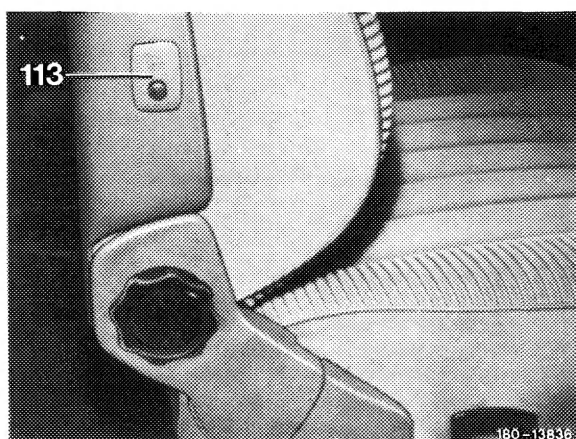

9 Fit clamp spring (114).

10 Push on connection piece (17) with control line.

11 Install tension piece of driver's seat back.

